



180011112242



(2018) 国认监认字(244)号



151111260099



中国认可
国际互认
检测
TESTING
CNAS L6780

检验报告


TEST REPORT



Scan is following us



Scan checks for authenticity



* W 2 0 2 0 2 6 6 8 5 E *

浙江省轻工业产品质量检验研究院

Zhejiang Light Industrial Products Inspection and Research Institute

国家纺织服装产品质量监督检验中心(浙江)

National Textiles and Garment Quality Supervision Inspection Center(Zhejiang)

Test report

Number:W202026685E

page1/3

| | | | |
|--|---|-----------------|--|
| Name of Customer | Zhejiang The Purples Protective Products Co., Ltd | Address | No. 45, Suhua Street, Suxi Town, Yiwu, Zhejiang Province |
| Manufacturer | Zhejiang The Purples Protective Products Co., Ltd | Address | No. 45, Suhua Street, Suxi Town, Yiwu, Zhejiang Province |
| Sample information | Name of sample: Children Face Mask(Non Sterile) Characteristics of sample: Blue Trademark of sample: --- Specification/model: --- Level: Children protective mask(F) Category of safety specification: --- Art. No.: --- ----- | | |
| Above-mentioned information by Customer-supplied | | | |
| The sent way of sample | Courier | Sample quantity | 50 pieces |
| Receiving Date of Sample | 2020/06/18 | Test Category | Entrusted inspection |
| Date of Testing | 2020-06-18~2020-06-23 | | |
| RatingRequirements | GB/T 38880-2020 | | |
| Test Summary: See the attached page for the results. <div align="right"> [印章] Test Seal Date of Approval: 2020-06-24 </div> | | | |
| Remarks | As per client's request, the sample is not pretreated and the result is for reference. | | |

Approved by:



Test report

Number:W202026685E

page2/3


| ITEM | STANDARD Children protective mask(F) | RESULT | RATING |
|---|--|------------------------|--------|
| 1. PARTICLE FILTER EFFICIENCY (SALT MEDIUM) (GB/T 32610-2016Appendix A)(%) | | | |
| - | ≥95 | 95.1 | PASS |
| 2. FORMALDEHYDE (GB/T 2912.1-2009)(mg/kg) | | | |
| - | ≤20 | NOT DETECTED | PASS |
| 3. pH VALUE (INNER LAYER) (GB/T 7573-2009) | | | |
| | 4.0~7.5 | 6.4 | PASS |
| 4.SHARPNESS OF THE TIP AND EDGE OF THE ACCESSORY (GB/T 31702-2015) | | | |
| - | There should be no sharp points or sharp edges that can be reached | No sharp tips or edges | PASS |
| 5. AZO (GB/T 17592-2011) (mg/kg) | | | |
| - | FORBIDDEN | NOT DETECTED | PASS |
| 6.THE BREAKING FORCE OF THE MASK BELT AND THE CONNECTION BETWEEN THE MASK BELT AND THE MASK BODY (GB/T 13773.2-2008)(N) | | | |
| - | ≥15 | 17 | PASS |
| 7.COLOUR FASTNESS TO RUBBING (GB/T 29865-2013) (GRADE) | | | |
| -DRY | ≥4 | 4-5 | PASS |
| 8.MOBILITY FLOURESCENT BRIGHTENER(INNER LAYER) (FZ/T01137-2016) | | | |
| -flourescent brightener (C.I.220) | NOT DETECTABLE | NOT DETECTED | PASS |
| -flourescent brightener (C.I.85) | NOT DETECTABLE | NOT DETECTED | |
| -flourescent brightener (C.I.113) | NOT DETECTABLE | NOT DETECTED | |
| -flourescent brightener (C.I.351) | NOT DETECTABLE | NOT DETECTED | |
| -flourescent brightener (C.I.71) | NOT DETECTABLE | NOT DETECTED | |
| -flourescent brightener (C.I.162) | NOT DETECTABLE | NOT DETECTED | |
| -flourescent brightener (C.I.140) | NOT DETECTABLE | NOT DETECTED | |
| -flourescent brightener (C.I.135) | NOT DETECTABLE | NOT DETECTED | |
| -flourescent brightener (C.I.199) | NOT DETECTABLE | NOT DETECTED | |
| Remark: 1. FORMALDEHYDE: Method Detection Limit: 20mg/kg; 2. AZO: Method Detection Limit:5mg/kg. 3.MOBILITY FLOURESCENT BRIGHTENER:Method Detection Limit: C.I.220:14 mg/kg; C.I.85:8 mg/kg; C.I.113:8 mg/kg; C.I.351:0.2 mg/kg;C.I.71:4 mg/kg; C.I.162:2 mg/kg;C.I.140:0.8 mg/kg;C.I.135:0.2 mg/kg;C.I.199:0.4 mg/kg. | | | |

Test report

Number:W202026685E

page3/3

Picture(s) of sample

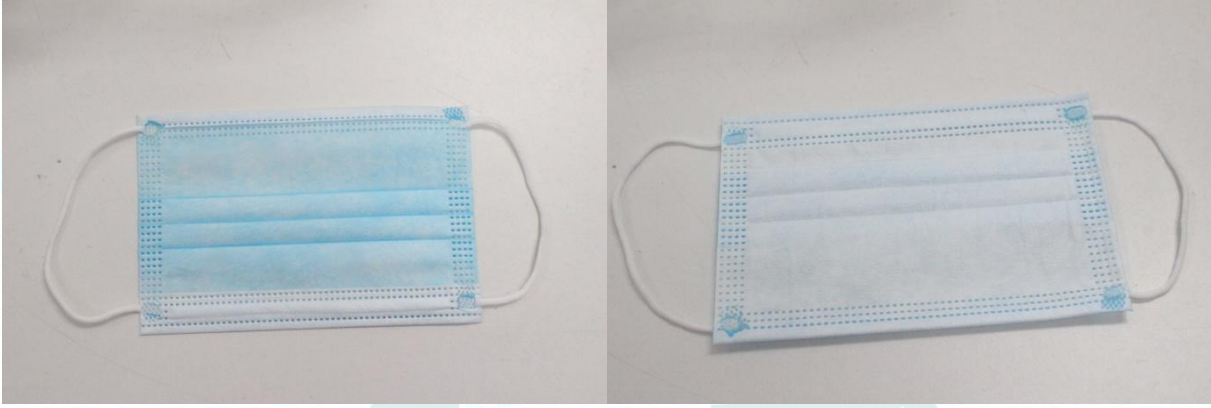

—End of report—



DECLARATION

1. Our organization guarantees impartiality, independence and honesty of inspection, and is responsible for the results of inspection, keeping the samples supplied by the entrusting party confidential and at the same time protecting the ownership of the samples supplied.
2. The test report will be deemed invalid without signatures of the inspector/reviewer and authorized personnel, and the red special inspection stamp of our organization.
3. The test report will be invalid if it is altered. Copies of the report are invalid without the red special inspection stamp of our organization.
4. The test results shown in this report are applicable only to the samples provided by customers.
5. All the pages of the report are integral parts of the report. Our organization will not be responsible for any misunderstanding or other results caused by using separate page(s) of the report.
6. If there is any dissent of the report, the entrusting party shall notify our organization timely. For the mandatory inspection given by governmental administration departments, and dissent about the sample being tested or test results on the report should be dealt with in accordance with national regulations.

浙江省轻工业产品质量检验研究院及附设的检验中心 The Affiliated Inspection Centers

浙江省轻工业产品质量检验研究院

Zhejiang Light Industrial Products Inspection and Research Institute

国家纺织服装产品质量监督检验中心（浙江）

National Textiles and Garment Quality Supervision Inspection Center (Zhejiang)

地址：浙江省杭州市江干区下沙路300号6号楼

Address: Building No.6, 300 XiaSha Road, Hangzhou, Zhejiang

联系电话：0571-85122669

Telephone: 0571-85122669

E-Mail: 1137907994@qq.com

国家家具产品质量监督检验中心（浙江）

National Center for Quality Supervision Inspection of Furniture (Zhejiang)

浙江省室内安全及家具产品质量检验中心

Zhejiang Center of Quality Test for Indoor Safety and Furniture Products

地址：浙江省杭州市余杭区良渚街道经一路1号良渚大学科技园4号楼

Address: Building 4 LiangZhu University Science and Technology Park, No.1, JingYi Rd, Yuhang District, Hangzhou, Zhejiang

联系电话：0571-89009556

Telephone: 0571-89009556

E-Mail: 2047699564@qq.com

浙江省轻工及五金产品质量检验中心

Zhejiang Center of Quality Test for Light Industry and Hardware Products

浙江省体育用品质量检验中心

Zhejiang Center of Quality Test for Sports Products

地址：浙江省杭州市西湖区天目山路222号3号楼

浙江省杭州市余杭区良渚街道经一路1号良渚大学科技园3号楼

Address: No. 222 Tianmushan Rd., Hangzhou, Zhejiang

Building 3 LiangZhu University Science and Technology Park, No.1, JingYi Rd., Hangzhou, Zhejiang

联系电话：0571-89001107

Telephone: 0571-89001107

E-Mail: wujtest@126.com

国家锁具产品质量监督检验中心（浙江）

National Center for Quality Supervision Inspection of Lock (Zhejiang)

浙江省锁具产品质量检验中心

Zhejiang Center of Quality Test for Lock Products

地址：浙江省杭州市塘苗路24号

Address: No. 24 Tangmiao Rd., Hangzhou, Zhejiang

联系电话：0571-85027738

Telephone: 0571-85027738

E-Mail: Locktest@126.com

网上业务受理/报告查询：<http://www.zjttj.cn>

Online Business-Reception/Report Inquires: <http://www.zjttj.cn>

投诉电话：0571-85023552

Complaint Tel: 0571-85023552